



# Infant Optics DXR-8 Monitor Replacement

A guide for disassembling the Infant Optic DXR-8 monitor.

Written By: Larsha Johnson



## INTRODUCTION

The disassembling of the monitor is so to be able to change the screen or replace other components of the monitor.

---



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Monitor



- Start by gently inserting the plastic opening tool between the led and casing.

## Step 2

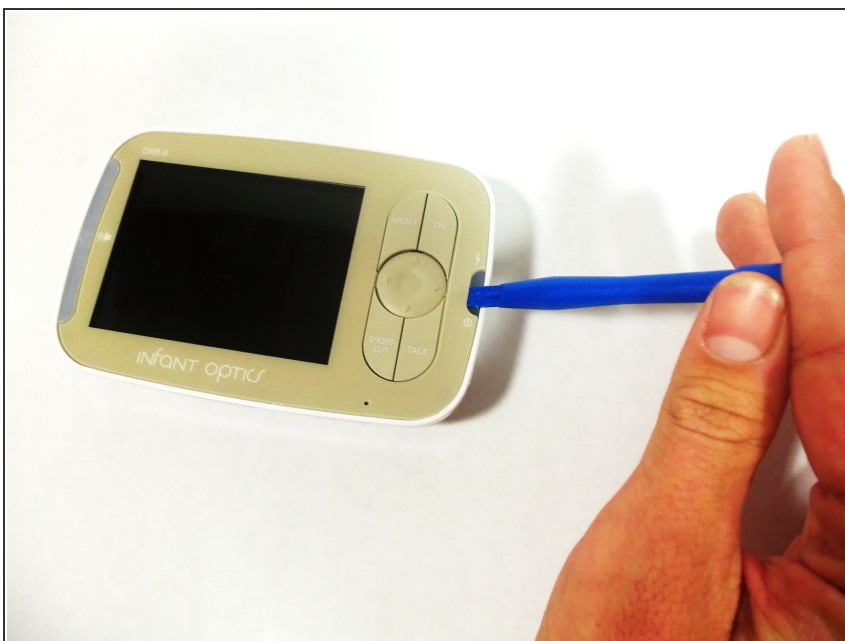


- Slowly pry the cover away from the bottom using the plastic opening tool.

## Step 3




- Glide the tool around the entire cover to reveal the screws, which are 5.0 mm.

## Step 4

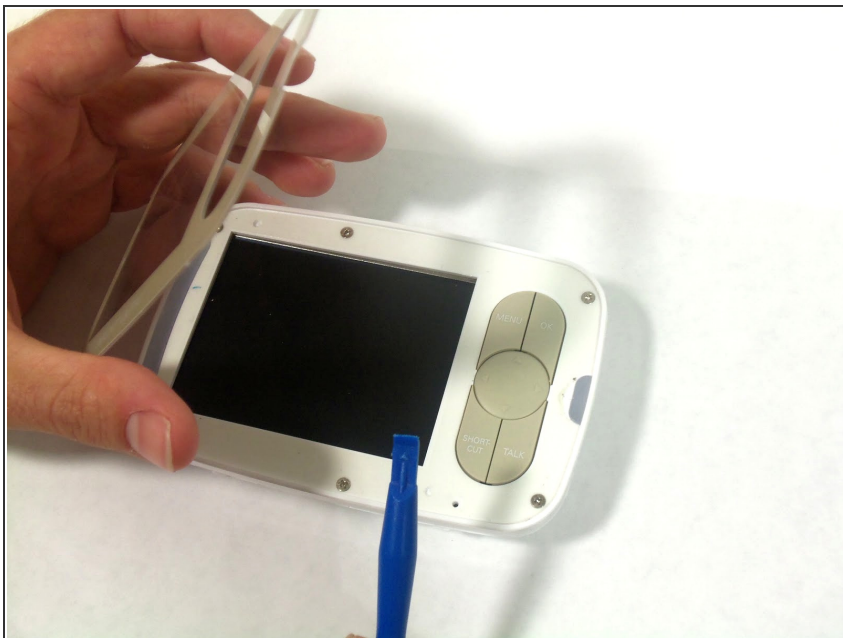

- Remove the cover and set it aside.

## Step 5

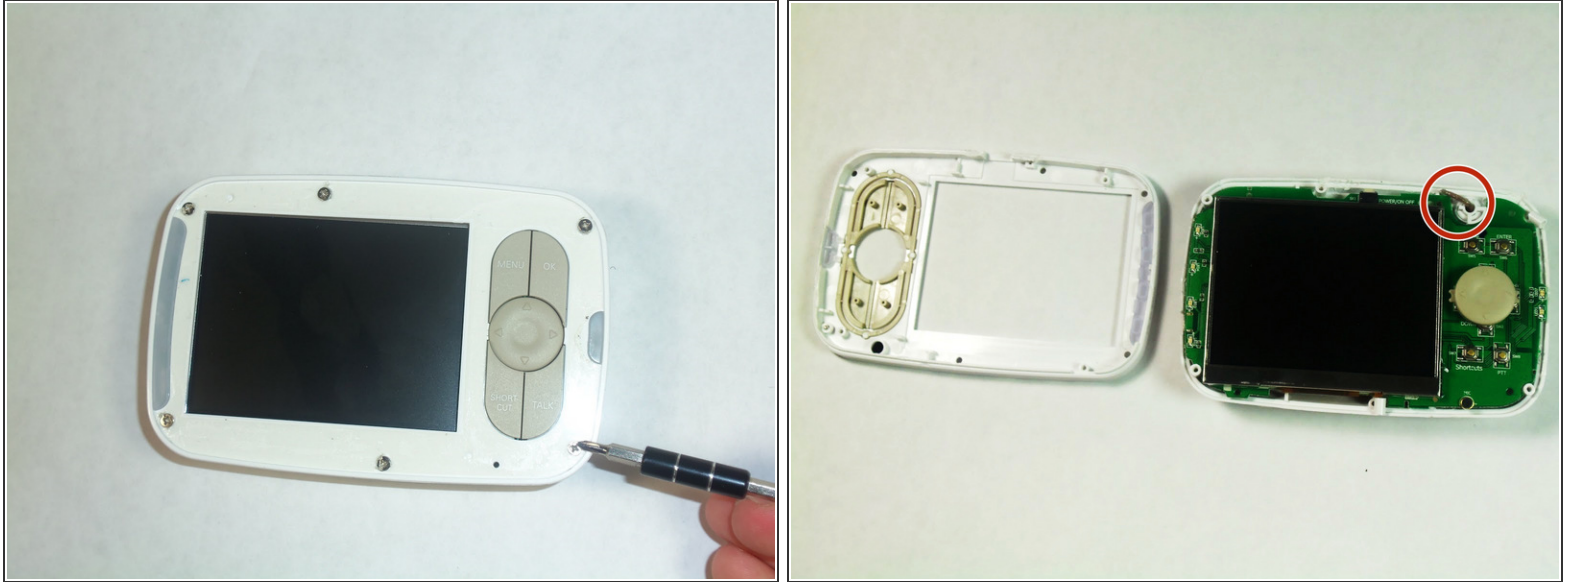

- Remove the four corner screws, 5.0 mm, using a J1 bit.

⚠ Lift the top away from the bottom using the metal spudger. Be careful not to rip the antenna wire.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 03:40:44 PM.